



Release Version 3.8.0 Notes

September 13, 2019

Feature Updates

Export Content/Events

From the Events view tab, export tags/events based on a selected timeframe and profile level.
Limits: 1-month max export timeframe

Running Speed Indicator

The running speed trend line now displays across the entire trend when zooming in/out, so you'll always have the running speed available to view in the trend plot.

Alarm Notification Criteria

A minor but important change: data points that are below an indicator's 'off-threshold' will be included in notification criteria now so that notification criteria is accurate. Previously, data that fell below 'off threshold' would not be considered in notification criteria, which caused occasional alarm notifications even though the criteria was not met

Automatic Run Speed Tracker (*Coming soon-currently in beta Testing only**)

Using user-input asset information, 'Auto-Track Run Speed' calculates running speed for each data point. Auto-track run speed will make accurate analysis and fault detection even easier by giving you an accurate running speed.

**Contact your Sentry Analyst or KCF support for more information*

Other Enhancements

- Low battery alarms have been removed from the Hardware Events log
- The Events view tab now has better performance when handling large number of events
- Important Fixes:
 - Estimated battery life for Oil Quality and Agnostic type sensors corrected
 - Sensor update interval is empty or set to 12 seconds-corrected
 - Expected Speed values (Asset Details) doesn't populate the running speed