



## SmartDiagnostics<sup>®</sup> Application Note

### Base Station Network Configuration


**Publication Date:** Jan 1, 2017

KCF Technologies, Inc.



## Installation Procedure


1. Open up the Base Station casing
2. Locate the black Ethernet switch

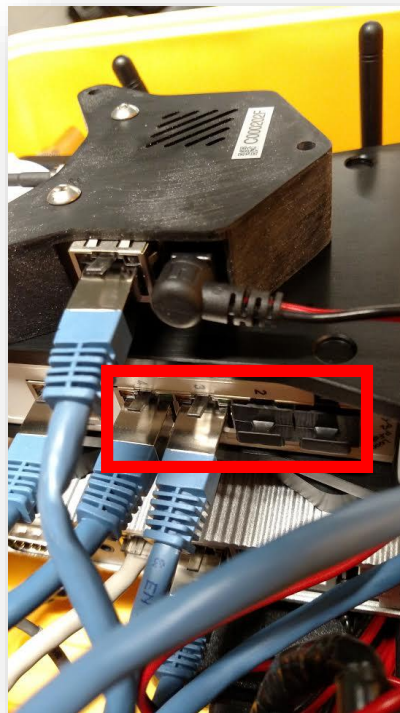

3. Remove Ethernet plugs from the switch
4. Plug an Ethernet cable into the switch and connect the other end to a computer
5. Open a web browser on the computer and navigate to: **192.168.151.100**



6. The SmartDiagnostics® Sign In page should appear
  - a. Username: **admin**
  - b. Password: **r0semapl3**
7. Select the **Network** tab
8. Choose the Adapter Type: **Wireless/Ethernet**
9. Enter in specific network details
10. For on-premises (local) installations, select the **Data Source** tab
  - a. Provide the address or name of the server the software has been installed on

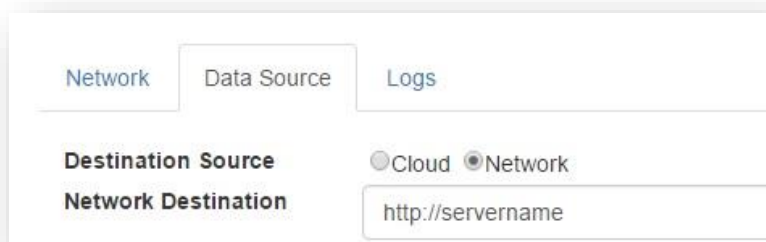

11. Click the **Update** button on the bottom left of the screen

**Adapter Type**  Ethernet  Wireless

**Address Type**  DHCP  Static

**IP Address:**

**Subnet Mask:**

**Default Gateway:**

**DNS Server:**

Proxy

---

**Proxy Server:**  Yes  No

12. After the progress bar finishes, your Base Station is ready for use!